

GLAZEN VITRINEKAST

1926

HANGING GLASS CABINET

MATERIALEN:

MATERIALS:

a. 1.5 x 1.5 x 309.0	4x	hoekprofiel, staal:	angle profile, steel:
b. 1.5 x 1.5 x 25.0	4x	regels	bars
c. 1.0 x 1.0 x 24.0	4x	stijlen	posts
		glasprofielen	glass profiles

d. 3.5 x 312.0	2x	strip, staal:	butt-strap, steel:
e. 1.2 x 22	4x	bevestigingsstrips	fastening strips
f. 1.5 x 1.5 x 312.0	2x	tussenstrips	strip
		schuifprofielen	sliding profiles

23.0 x 78.0 x 0.5	4x	glas:	glass:
23.0 x 78.0 x 0.3	8x	onderzijde	bottom pane
23.0 x 23.0 x 0.3	2x	boven- en achterzijde	upper and back pane
23.0 x 79.0 x 0.3	4x	zijkanen	side panes
		schuifruitjes	sliding panes

staalwerk: aluminiumverf (mat)

COLOUR:

steel-work: aluminium paint (matt)

ALGEMENE WERKWIJZE

1. stalen stijlen en regels met kraspen aftekenen, passen, merken, in verstek afkorten, passen.
2. glasprofielen met kraspen aftekenen, passen, merken, afkorten en voorboren, passen, gaten aftekenen op stijlen voorboren t.b.v. boutje met verzonken kop en draad tappen.
3. bevestigingsstrips met kraspen aftekenen, passen, merken, afkorten voorboren en passen.
4. stijlen, regels en strips aanenlassen tot frame en bevestigingsstrips op achterregels lassen.
5. staalwerk ter plaatse van lassen en beëindigingen bijlijpen, alle staalwerk ontvetten, planturen, schuren, menen, gronden, lakken en aflakken.
6. glasplaten passen, glasprofielen m.b.v. boutjes vastzetten, kast aan de wand bevestigen door bevestigingsstrips op horizontale wandregels te bevestigen.

bijzonderheden:

Ontworpen i.s.m. met Mevr. Schröder-Schröder. Deze kast, gebouwd volgens een beproefde aquarium techniek, komt in verschillende maten voor in door Rietveld ontworpen interieurs. Ook komen versies zonder schuifruitjes voor.


METHOD:

1. mark off the steel posts and lines with a marking pin, fit, mark, shorten in a mitre box, fit again.
2. mark off the glass profiles with a marking pin, fit, mark, shorten and prebore, fit, mark off the holes on the posts, prebore for the bolt with a countersank head and cut a thread in the prepared opening, fit.
3. mark off the fastening strips with a marking pin, fit, mark, shorten and prebore and fit again.
4. weld the posts, bars and strips to a frame and weld the fastening strips to the back bars.
5. polish the steel work at the place of the joints and endings, scour all steel work, prime, sandpaper, paint with red lead, give it a ground, lacquer and finish.
6. fit the panes, fasten the glass profiles with bolts, attach the cabinet to the wall by fixing the fastening strips to the vertical lines.


particulars:

Designed in cooperation with Mrs. Schröder-Schröder. This cabinet built according to tested aquarium technology, occurs in various sizes in interiors designed by Rietveld. There are also versions without sliding panes.


vooraanzicht / **front view**

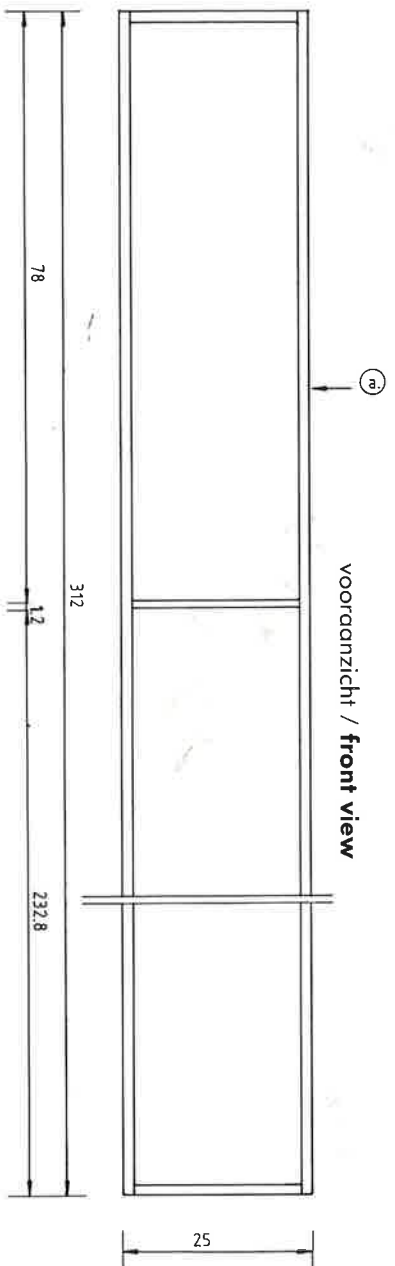

bovenaanzicht / **upper view**

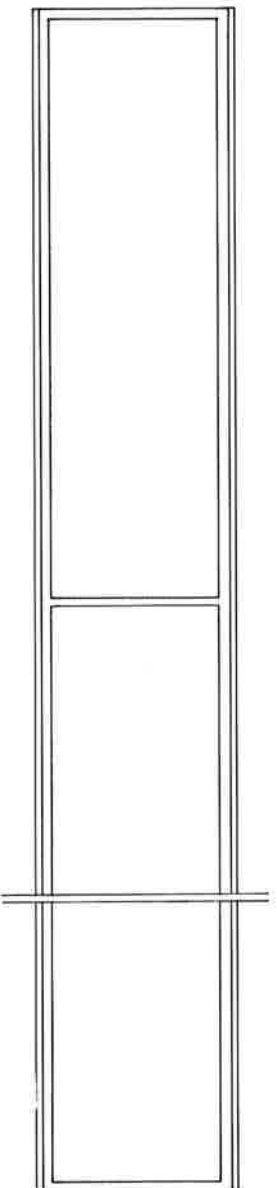

showroom Metz & Co.

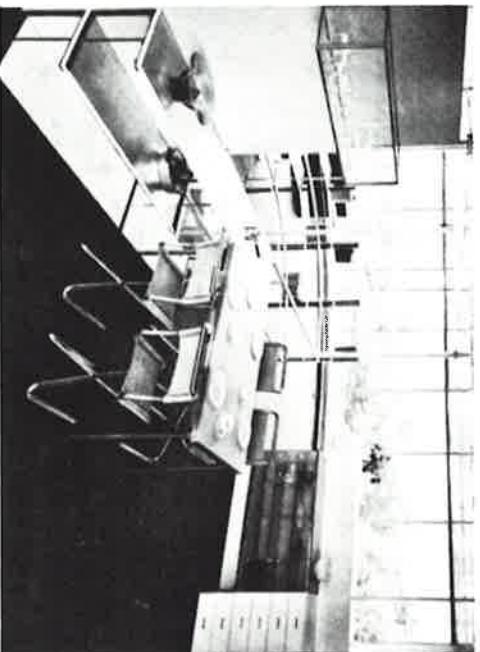

woonkamer / **Livingroom** dr. Harrestein

